

OWNER'S & INSTALLATION MANUAL

The 2nd-Generation Centralized Controller

Please keep this specifications manual properly.
Read this specifications manual carefully before using the equipment.

Applicable model:

MD-CCM03(A) MD-CCM03/E(M)
MD-CCM03/E MD-CCM03/E(T)
MD-CCM03/E(H) MD-CCM03/ET(H)
UL-CCM03(A)/E LZ-UPW3B

- ★ Model MD-CCM03/E(H) and MD-CCM03/ET(H)
display temperature with fahrenheit (“°F”).

CONTENT

PAGE

I. Installation part

- List of fittings and precautions.....2
- Notes to installation.....3
- Installation procedure.....3
- Wiring procedure.....3
- Safety precautions.....4
- System wiring instruction.....5

II. Operation part

- Basic conditions of operating the electric controller.....5
- Function categories of electric controller.....5
- Function description of each part.....5
 - System composition.....6
 - Keywords and general function description.....6
 - Electric controller function description
(keypad operation description).....7
 - General display data entries.....12
 - LCD display description.....13
 - Fault and protection code table.....14
- Technical indices and requirements.....15

- Thank you very much for purchasing our product.

The 2nd-Generation Centralized Controller

- This specification manual describes the conditions of operating the centralized controller and its control functions.
- This specification manual is applicable to centralized controllers. But the functions available from the centralized controller described herein or the displayed data need support of the main control board of the air conditioner.
- For convenience of future reference, keep this manual properly after reading it.
- For any question, contact the distributor.

I. Installation part

■ List of fittings and precautions

1) Packing box list of 2nd-generation indoor unit centralized controller.
Check whether the assemblies are complete.

Serial No.	Name	Quantity	Remarks
1	2 nd -generation indoor unit centralized controller	1 PCS	According to the applicable model
2	Fastening cross groove pan head self-tapping screw	6 PCS	GB845/ST3. 9X25-C-H (S)
3	Fastening plastic expansion pipe	6 PCS	Φ6X30
4	Installation & Operation Manual	1 PCS	This manual
5	Matching resistance	4 PCS	120 Ω

2) Installation assemblies prepared on the site

Serial No.	Name	Quantity (install into wall)	Selected model	Remarks
1	3-core control shielded cable	2 PCS	RVVP-300/300 3×0.75mm ² or AWG22-20	One for communicating with the air conditioner; the other for communicating with the computer.
2	3-core cable	1 PCS	RVV-300/500 3×1.5mm ² or AWG18-16	For power supply of the Centralized Controller
3	Switch box	1 PCS	-----	-----
4	Wire pipe (jack casing pipe, captive nut)	2/3 PCS	-----	-----
5	Tighten strip	Several pieces	-----	For binding cables(as the case may be)


■ Notes to installation

Notes to installation of centralized controller

- 1) The surface structure of the centralized controller depends on its model (There are two different backward cover for the controller).
- 2) The model MD-CCM03/E(T) centralized controller is guaranteed to use in the heat recycling three-pipe system.
- 3) Besure to connect the power supply wiring to the power supply terminal block.

Power Supply	MD-CCM03(A) , MD-CCM03/E(M) MD-CCM03/E, MD-CCM03/E(T) MD-CCM03/E(H),MD-CCM03/ET(H)	Single phase,50Hz,220V-240V
	UL-CCM03(A)/E	Single phase,60Hz,208V-230V

- 4) When running power supply and transmission wires paralalled to each other,run them through seprate conduits or maintian a suitable distance between them.
- 5) Transmission wiring should be done within the following limitation. If they are exceded, transmission problems may occur.
Max,wiring length:1,200 m or 3,940 ft.
- 6) No intermediate joint is allowed for the shielded cable. If joints are inevitable, crimp it with the terminal.
- 7) After the centralized controller is connected, do not use megohmmeter to inspect insulation of the signal cable.
- 8) Wiring mode of the centralized controller and the network interface:
The communication port between the centralized controller and the network interface of the air conditioner is polarity-sensitive. The X, Y and E at both sides should correspond properly. Dot not cross-connect cables. The same principles apply to the RS485-RS232 of the centralized controller.

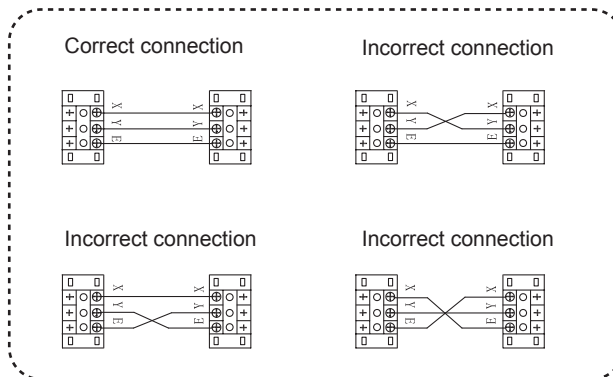

- 9) For model UL-CCM03(A)/E: Controls shall be constructed so as to be installable in accordance with the National Electrical Code, NFPA 70.

■ Installation procedure (see in Fig.1-1 ~ Fig.1-8)

- 1) Procedure of installing electrician switch box of centralized controller

The size of the centralized controller wire depends on the length. Use a wiring pipe adaptable to the wires of the centralized controller to perform installation. Insert the flathead screwdriver into the concave on the upper side of the box, and rotate slightly to open the upper cover of the centralized controller.

■ Wiring procedure (see in Fig.2)

Network air conditioner wiring diagram (two types for indoor unit:

- 1) The main control board needs an external network interface module;
- 2) Net work interface module is built in the main control board).



Note

1. The RS485-to-RS232 module in the wiring diagram and the wires are put into use only when the network system needs to be connected with the computer. One computer can be connected with 16 centralized monitors as a maximum. Namely, a maximum of $16 \times 64 = 1024$ indoor units can be connected. The centralized controllers are differentiated by address bits. The configurable range is 0~15. No duplicate address of centralized controller is allowed in a unified network.
2. For the new series product, we can connect the indoor CCM controller via XYE port of master outdoor unit of every refrigerant system. Notice that in this case, the outdoor unit must be set to automatic searching address mode. And it will be effective after about 6 minutes.
3. To connect indoor CCM controller via XYE port of indoor unit, this wiring method is suitable for all type of indoor units, not just for new indoor units.
4. When new indoor units and old indoor units mix connect to one refrigerant system, we can just connect the indoor CCM controller via XYE port of indoor units. If we connect the indoor CCM controller via XYE port of master outdoor unit, the CCM controller can not control old indoor units.
5. If one system that connect to indoor CCM controller include 10 HP or above duct indoor unit, we recommend you set the address of every indoor unit manually.

■ Safety precautions

- ! Read the safety precautions carefully before installing the unit.
- ! Stated below are important safety issues that must be obeyed.
- ! The meanings of all parts are as follows:

	Warning	Means improper handling may lead to personal injury or property loss.
	Note	Means improper handling may lead to personal death or severe injury.

! Upon completion of the installation, check whether the trial run is normal, and deliver the user's manual to the user.



Warning

Please entrust the distributor or professionals to install the equipment. Installation by unauthorized persons may lead to imperfect installation which may result in electric shock or fire.

Adhere to this installation manual. Improper installation may lead to electric shock or fire.

Reinstallation must be performed by professionals. Improper installation may lead to electric shock or fire.

Do not uninstall the equipment without permission. Unauthorized uninstalling may lead to abnormal operation, heating or fire of the air conditioner.




Note

Do not install the equipment in a place vulnerable to leakage of flammable gases. Once flammable gases are leaked and left around the centralized monitor, fire may occur.


The wiring shall adapt to the current of the centralized monitor. Otherwise, electric leakage or heating may occur and result in fire.

System wiring instruction

1) Wiring diagram of building network air conditioning system.

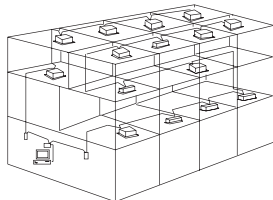


Wiring diagram with good communication effect

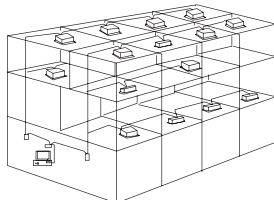

Wiring diagram with poor communication effect (not recommended because it may lead to poor communication)

2) System wiring diagram of centralized monitoring and indoor unit of air conditioner

Both of the following wiring modes of centralized monitor and indoor unit are applicable: (Quantity of indoor units connected with each centralized monitor is less than or equal to 64).

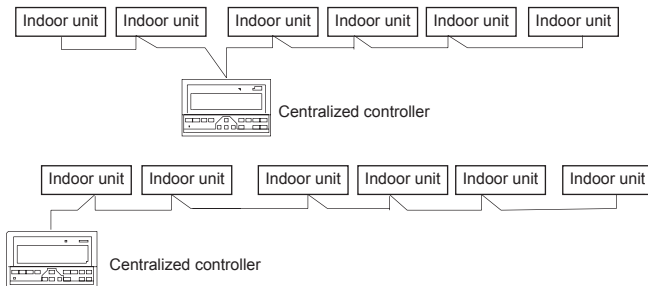

II. Operation part

Basic conditions of operating the Centralized Controller

1) Applicable range of supply voltage:

**MD-CCM03(A), MD-CCM03(E(M),
MD-CCM03/E, MD-CCM03/E(T):**

Input voltage: Single-phase 220V-240V;
AC input power supply frequency: 50Hz/60Hz.

UL-CCM03(A)/E

Input voltage: Single-phase 208V-230V;
AC input power supply frequency: 60Hz.

2) Operating environment temperature:

-15°C~+43°C(-5°F~+109°F).

Operating environment Relative Humidity:
RH40%~RH90%.

3) Degrees of Pollution: Pollution Degree 2.

4) Automatic Action: Type 1 Action.

5) Rated impulse voltage: 1500V .

6) The ball pressure test temperature of the plastic encloser: 125°C(257°F).

Function categories of the Centralized Controller

Functions of the centralized controller:

1) System composition

2) Keywords and general function description

3) Description of electric control functions of centralized controller

4) Technical indices and requirements

Function description of each part

● System composition

- 1) The centralized controller is used to perform centralized control and data query for the network air conditioner. Each centralized controller can communicate with a maximum of 64 air conditioners to make up an air conditioner LAN, and implement centralized monitoring for the air conditioners in the network.
- 2) The centralized controller can be interfaced with computer or gateway to implement centralized control and status query for all air conditioners in the network. It can be connected with WAN via computer or gateway to implement remote computerized control (with support of computer software). Each local computer or gateway can be connected to 16 centralized controllers as a maximum.
- 3) The master/slave answer mode is implemented for communication between the centralized controller and the air conditioner, between the computer and the centralized controller. In the LAN composed of centralized controller and air conditioner, the centralized controller is a master, and the air conditioner is a slave. In the LAN composed of computer and centralized controller, the computer or gateway is a master, and the centralized controller is a slave.
- 4) The schematic diagram of network control system composition of air conditioner: (see in Fig.3).

● Keywords and general function description

1) Power on or reset

When the centralized controller is powered on or reset, all display segments of the LCD are luminous for 2 seconds and then goes off. 1 second later, the system enters the normal display status. The centralized controller is in the main page display status and displays the first page, and searches the in-service air conditioners in the network. Once the search is finished, the centralized controller enters the mode setting page, and sets the first in-service air conditioner by default.

2) Network area address of centralized controller

The local computer or gateway can be connected with 16 centralized controllers for communication. Each centralized controller serves as an area of the air conditioner network. The centralized controllers are differentiated by bit selection address. The configurable range is 0~15.

3) State indication

If any local keypad operation is setting the operation status of the air conditioner, the indicator is on when the signals are sent. Upon completion of the setting process, the indicator goes off. If an in-service air conditioner in the network is faulty, or the centralized controller network itself is faulty, the indicator will blink at 2Hz.

If one or more in-service air conditioners in the network are running, including under setting of timing start/shutdown, the indicator will be luminous. Otherwise, the indicator is off.

4) **Locking of centralized controller**

After receiving the centralized controller locking command sent from the computer, the centralized controller disables the startup/shutdown and setting of the air conditioner, and sends commands to lock remote controllers of all air conditioners in the network of the centralized controller. After receiving the unlocking command, the centralized controller enables the startup/shutdown operation, and sends commands to unlock the remote controller of all air conditioners.

The locking status of the remote controller can be locked or unlocked by the computer or centralized controller separately. The locking status of the centralized controller is memorized after power failure of the centralized controller, and will not vanish after the power supply is restored, unless the command of unlocking is received.

5) **Mode locking function**

After the mode locking command is received, the command is forwarded to the air conditioner, and the centralized controller displays the mode locking flag. After the command of unlocking is received, the non-conflict mode can be selected freely. The centralized controller can also lock modes of all indoor units.

6) **Emergent shutdown and compulsory startup**

When the emergent shutdown switch of the centralized controller is turned on, all air conditioners in the network of the centralized controller will shut down compulsorily. The centralized controller and computer and all functional modules are disabled from startup and shutdown until the foregoing switch is turned off. When the compulsory startup switch of the centralized controller is turned on, all air conditioners in the network of the centralized controller will start up compulsorily. By default, they will run in the cooling mode. The startup and shutdown operations of the centralized controller and the computer and all functional modules will be disabled (only the command of startup is sent to the air conditioner, without affecting operation of the remote controller after startup) until the foregoing switch is turned off.

If the foregoing two switches are turned on concurrently, the emergent shutdown switch shall have preference.

● **Electric controller function description**

 
Keypad operation description (The schematic diagram as illustrated in Fig.4)

1) Query key

Any time when you press the key, the selected operation mode is to query the operation status of the air conditioner. By default, the first in-service air conditioner will be queried. Through the Add and Reduce keys, you can change the parameter page to be queried; through the Up, Down, Left and Right keys, you can change to query status of other in-service air conditioners.


2) Set key

In other display mode, press the key to enter the setting mode. By default, it is single setting, and the first in-service air conditioner is displayed. In setting operation mode, press the key again, and the operation will be performed for all air conditioners in the network. Press the key repeatedly to shift between single setting and global setting.



3) Mode key

 In setting operation mode, press this key to set the operation




In other display mode, press the key to enter the setting mode. By default, it is single-machine setting, and the first in-service air conditioner is displayed.

When connect the HRV to centralized controller, LCD display of centralized controller corresponding to HRV mode as following:
Centralized cooling mode vs. HRV heating recovery mode (HEAT RECOVERY)
Centralized heating mode vs. HRV heating by-pass mode (BYPASS)
Centralized air supply mode vs. HRV air supply mode (SUPPLY)

4) Fan key

 In setting operation mode, press this key to set the fan of the indoor unit of the air conditioner to run in the automatic, high, medium or low level of air.




5) Time on key

In setting operation mode, press this key to set the timing startup of air conditioner; press the key again to exit the timing setting, and restore the normal temperature regulation operation mode.



6) Time off key

 In setting operation mode, press this key to set the timing shutdown of air conditioner; press the key again to exit the timing setting, and restore the normal temperature regulation operation mode.



7) Swing key

In setting operation mode, press this key to enable or disable the swing function. If all currently selected air conditioners have no swing function, no effect will result after pressing the key.

8) Leftward key

In the query mode, every time when you press the key, the operation status data of the previous air conditioner will be displayed.

If it is currently on the first machine, press the key again, and the data of the last machine will be displayed. If you hold down this key, the address will decrease one by one.

In the setting mode, every time when you press the key, if it is in single operation mode, the air conditioner of the previous in-service address number will be selected. If it is in the global operation mode, no effect will result after the key is pressed.

In the main page, press the key to enter the query mode. By default, it is the first in-service air conditioner.

9) Rightward key

In the query mode, every time when you press the key, the operation status data of the last air conditioner will be displayed. If it is currently on the last machine, press the key, and the data of the first machine will be displayed. If you hold down this key, the address will increase one by one.

In the setting mode, every time when you press the key, if it is in the single operation mode, the air conditioner of the next in-service address number will be selected.

If it is in the global operation mode, no effect will result after the key is pressed. In the main page, press the key to enter the query mode. By default, it is the first in-service air conditioner.

10) Downward key

In the query mode, every time when you press the key, the operation status data of the air conditioner corresponding to the next row of the matrix will be displayed. If it is currently in the last row, press the key, and the data of the air conditioner corresponding to the first row will be displayed. If you hold down this key, the row will increase one by one.

In the setting mode, every time when you press the key, if it is in the single operation mode, the air conditioner corresponding to the last row will be selected. If it is in the global operation mode, no effect will result after the key is pressed.

In the main page, press the key to enter the query mode. By default, it is the first in-service air conditioner.

11) Upward key

In the query mode, every time when you press the key, the operation status data of the air conditioner corresponding to the previous row of the matrix will be displayed. If it is currently in the first row, press the key, and the data of the air conditioner corresponding to the last row will be displayed. If you hold down this key, the row will decrease one by one.

In the setting mode, every time when you press the key, if it is in the single operation mode, the air conditioner corresponding to the previous row will be selected. If it is in the global operation mode, no effect will result after the key is pressed.

In the main page, press the key to enter the query mode. By default, it is the first in-service air conditioner.

12) Add key

In the main page or the query mode, every time when you press the key, the data of the last page will be displayed. If it is now in the last page, press the key again, and the first page will be displayed.

In the setting mode, every time when you press the key, if it is in the temperature regulation mode, the set temperature will decrease by 1°C(or 2°F) until the highest allowed set temperature; if it is in the timing startup/shutdown time setting mode, select the upper-level set time, if no time is set, 0.0 will be displayed, if you hold down the key, the upper-level data will be selected consecutively.

The specific change mode is as follows:

0.0←0.5←1.0←1.5←2.0→2.5→3.0→3.5→4.0→4.5→5.0→5.5→6.0→6.5→7.0
7.5→8.0→8.5→9.0→9.5→10→11→12→13→14→15→16→17→18→19
20→21→22→23→24

13) Reduce key

In the main page or the query mode, every time when you press a key, the data of the current page will be displayed. If it is now in the first page, press the key again, and the last page will be displayed.

In the setting mode, every time when you press the key, if it is in the temperature regulation mode, the set temperature will decrease by 1°C(or 2°F) until the lowest allowed set temperature; if it is in the timing startup/shutdown time setting mode, select the upper-level set time, if no time is set, 0.0 will be displayed, if you hold down the key, the upper-level data will be selected consecutively.

The specific change mode is as follows:

0.0←0.5←1.0←1.5←2.0←2.5←3.0←3.5←4.0←4.5←5.0←5.5←6.0←6.5
7.0←7.5←8.0←8.5←9.0←9.5←10←11←12←13←14←15←16←17
18←19←20←21←22←23←24

14) ON/OFF key

Any time when you press the key, the centralized startup/shutdown operation is performed for all current in-service air conditioners in the centralized controller network. If all in-service air conditioners in the network are in the power-off status, press the key to perform the startup operation. If it is in the mode setting page currently, and the parameters such as startup mode, temperature and air speed are selected, the air conditioner will be started according to the selected parameters. If no mode is selected currently, and the air conditioner is powered off or it is in other display page currently, and the default startup mode is: Cooling, strong air, set temperature 24°C(or 76°F), swing function enabled. The default startup mode is locked according to the system mode or judged according to other constraint conditions. If any conflict exists, the next conflict-free mode will apply automatically. If conflict exists for all modes, startup will be impossible. If one or more in-service air conditioners in the network (including in the timing process of timing startup/shutdown), pressing this key will shut down all air conditioners. When performing the shutdown operation, the shutdown command is issued to the air conditioners in the startup status only, and is not issued to those in the shutdown status.

15) Lock key

In the mode setting mode, press the Lock key, and the remote controller of the currently selected air conditioner will be locked/unlocked. The operation mode is: If you select single-machine setting, the operation is performed for the air conditioner of the current address only. If the remote controller of the air conditioner is locked currently, issue the lock command; otherwise, send the lock command. If you does not select the single-machine mode, and the remote controller of one or more currently selected air conditioners is locked, issue the unlock command; if the remote controllers of all currently selected air conditioners are in the non-locked status, issue the remote controller lock command.

When the remote controller of the air conditioner is locked, the air conditioner does not receive remote control signals from the remote controller or wire controller until the remote controller is unlocked. Press the Query key and then press the Lock key, and the keys of the centralized controller will be locked or unlocked. If the keys are currently locked, press the foregoing keys concurrently again, and the keys will be unlocked; if the keys are currently unlocked, press the foregoing keys concurrently, and the keys will be locked. If the keys are locked, pressing of any key other than the Unlock key will be ineffective.

In the unified setting page, press the Up key and the Lock key concurrently to lock all air conditioner modules in the network. The mode locking is cancelled when the key is pressed again.

Note: When you lock or cancel locking, the corresponding icon indication appears or disappears only after all the attached air conditioners are set completely, so it takes a time period. When the number of attached air conditioners is high, wait patiently.

16) Confirmation key

In the setting mode, press the key to send the currently selected mode status and the auxiliary function status to the selected air conditioner, and display the mode setting operation results. After you select the operation mode and auxiliary function status information of the air conditioner, if you do not press the confirmation key, the selected information will not be sent to the air conditioner, and will not affect the current operation of the air conditioner.

The operations of remote controller locking and unlocking need no pressing of the confirmation key. The command information is sent directly after the locking key is pressed.

17) Reset key

Anytime when the reset key is pressed, the centralized controller will reset. The result is the same as the result of restoring power-on after power failure.

● General display data entries

- 1) General display data is displayed in all display pages.
 1. Under the interconnected control of the computer or gateway, the data is displayed in graphic . Otherwise, no data is displayed.
 2. If the centralized controller is connected with the functional module for communication, the data is displayed in graphics . Otherwise, no data is displayed.
 3. If the centralized controller is connected with the SMS remote control module for communication, the data is displayed in graphics . Otherwise, no data is displayed.
 4. If the centralized controller is connected with the telephone remote control module for communication, the data is displayed in graphics . Otherwise, no data is displayed.
 5. In normal operation of the centralized controller, the periodical cycle module communicates with the network interface module, and the data is displayed dynamically and cyclically: (blank), ●, , .
 6. In the centralized control locked status or the keypad locked status, the locking flag is displayed. After unlocking, it is not displayed. In the centralized controller locked status or the keypad locked status, the locking flag is displayed constantly. If both of them are locked concurrently, the locking flag is displayed constantly.
 7. In the setting page, if the selected air conditioner is in the remote controller locked status (in case of non-single machine operation, as long as one machine is in the remote controller locked status, it is deemed the locked status), the flag is displayed constantly.
 8. If all indoor units lock the cooling mode, this flag will display; if all indoor units lock the heating mode, this flag will display.

2) Data display handling

1. Indoor unit code (address) display: Display range: 00~63; with “#” being luminous concurrently.
2. Indoor temperature display: Display range: 00~99°C(or 99°F). “°C”(or “°F”) and “indoor temperature” are displayed concurrently. If the temperature is higher than 99°C(or 99°F), 99°C(or 99°F) is displayed. If the temperature value is invalid, “- -” is displayed.
3. If timing startup/shutdown is set, the flag is displayed.
4. T3, T2A and T2B display: In the single-machine query page, display can shift between “T3”, “T2A” and “T2B”, and the temperature value is displayed concurrently, with the corresponding “°C”(or “°F”) being luminous.
5. In case of air conditioner fault or protection, the corresponding fault code or protection code can be displayed.
6. Liquid crystal matrix display description:
(see in Fig.5-1, Fig.5-2)

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15
00+																
16+																
32+																
48+																

- a. The liquid crystal matrix is composed of 4*16 grids, and each grid is composed of two blocks of different sizes (as shown in the above figure).
- b. The matrix includes horizontal coordinates 00-15 on the upper side and vertical coordinates 00+, 16+, 32+ and 48+ on the left side, which indicate the address of the indoor unit. The sum of the horizontal coordinate and the vertical coordinate of the grid is the address of the grid. Each grid corresponds to an indoor unit of this address.
- c. One grid is composed of two blocks of different sizes. The status indication table is as follows:

Status Object	Constantly on	Slow blink		Fast blink
Big black block	In-service	Selected		Out of service
Small black block	Power on		Fault of indoor/ outdoor unit	Power off

● LCD display description (see in Fig.6)

- 1) Description of the standby page
 1. The LCD displays the standby page, 60 air conditioners are in service, of which 28 are powered on and 32 off.
 2. In the matrix, the big dots from (00,16+) to (15,32+) are luminous, and the small dots are not luminous. It indicates the 32 air conditioners with the addresses from 16 to 47 are powered off.
 3. In the matrix, the big and small dots from (09, 48+) to (12, 48+) are not luminous. It indicates the four air conditioners with the addresses from 57 to 60 are outside the network.
 4. All other big and small dots in the matrix are luminous. It indicates all other air conditioners are in the network and powered on.
 5. The address of the air conditioner is sum of the coordinates. For example, the address of (09, 48+) is 09+48=57.
 6. The centralized controller keypad is locked, and the centralized controller communicates with the computer normally.
- 2) Description of the query page (see in Fig.7 with Centigrade “°C”)
 1. The LCD displays the query page, and the air conditioner with the address of 08 is being queried. Mode of the air conditioner with the address 01 is: Cooling, strong air, swing on, indoor temperature 22°C(or 72°F),set temperature 20°C(or 68°F), cooling mode “lock”.
 2. In the matrix, only the big and small black dots at (00, 00+) and (01,00+) are luminous. It indicates the in-service and power-on status of the air conditioners with the addresses of 00 and 01.
 3. The centralized controller communicates with the computer normally.
- 3) Description of the setting page (see in Fig.8 with Centigrade “°C”)
 1. The LCD displays the setting page, and queries the air conditioner with the address of 08. The mode of the air conditioner with the address 08 is: Cooling, strong air, swing on, indoor temperature 28°C(or 82°F),set temperature 22°C (or 72°F),cooling.
 2. In the matrix, only the big black dots from (08, 00+) to (15, 00+) are luminous. It indicates the air conditioners with the addresses from 08 to 15 are in service.

3. The centralized controller communicates with the computer normally.
- 4) Fault page display description (see in Fig.9)
 1. Query the air conditioner with the address of 08 in the query page. The air conditioner with the address of 08 is faulty, and the fault code is E2. The big black dot below (08, 00+) blinks.
 2. In the matrix, only the big and small black dots from (00, 00+) to (15, 16+) illuminate. It indicates the in-service status of the air conditioners with the addresses from 00 to 31.
 3. The centralized controller communicates with the computer normally.

● Fault and protection code table

Fault code	Fault content	Description
EF	Other faults	
EE	Water level detection faults	
ED	Outdoor unit fault protection	
EC	Cleaning fault	
EB	Inverter module protection	
EA	Over-current of compressor (4 times)	
E9	Fault of communication between main board and display board	
E8	Air speed detection out of control	
E7	EEPROM error	
E6	Zero crossing detection error	
E5	T3 or T4 or digital compressor discharge temperature sensor fault	


E4	T2B sensor fault	
E3	T2A sensor fault	
E2	T1 sensor fault	
E1	Communication fault	
E0	Phase order error or phase loss	
07#		
06#		
05#		
04#		
03#	Fault of communication between centralized controller and computer (gateway)	
02#	Fault of communication between centralized controller and functional module	
01#	Fault of communication between centralized controller and network interface module	
00#	Fault of communication between network interface module and main control board	

Protection code	Protection content	Description
PF	Other protection	
PE	Reserved	
PD	Reserved	
PC	Reserved	
PB	Reserved	
PA	Reserved	
P9	Reserved	
P8	Over-current of compressor	
P7	Power supply over-voltage and under-voltage protection	
P6	Discharge low pressure protection	
P5	Discharge high pressure protection	
P4	Discharge pipe temperature protection	
P3	Compressor temperature protection	
P2	Condenser high-temperature protection	
P1	Anti cool air or defrost protection	
P0	Evaporator temperature protection	


■ Technical indices and requirements

1. EMC comply with the CE certification requirements.
2. Model UL-CCM03(A)/E comply with UL 60730-1.


Note:
The installation procedure show in Fig.1-1 ~ Fig.1-5 is for MD-CCM03(A) and UL-CCM03(A)/E

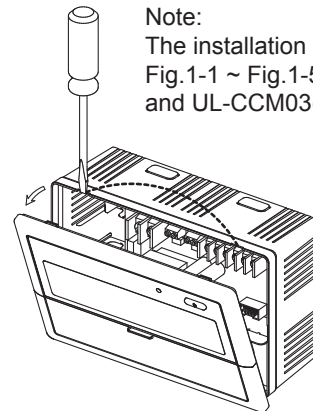


(Fig.1-1)

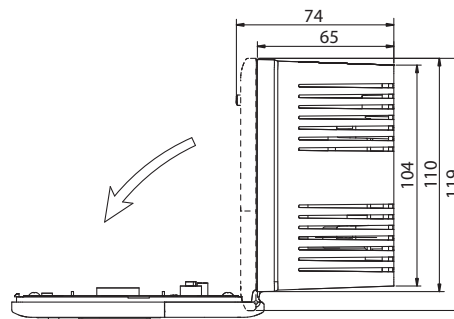


(Fig.1-2)

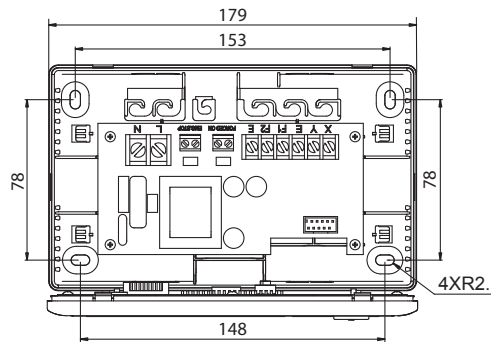

(Fig.1-3)

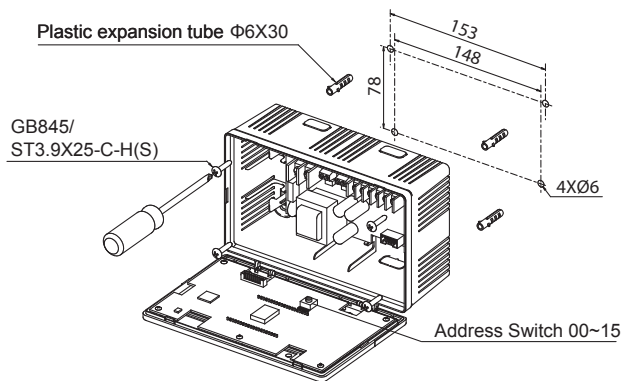


(Fig.1-4)

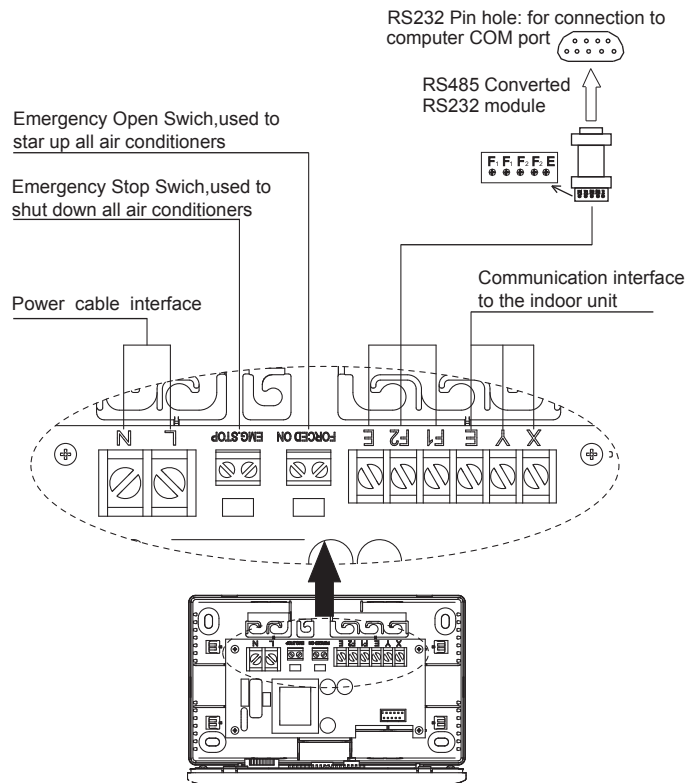

(Fig.1-5)


Installation dimensions:
As shown in the figure
on the right side.

Installation screw
holes (4 holes)

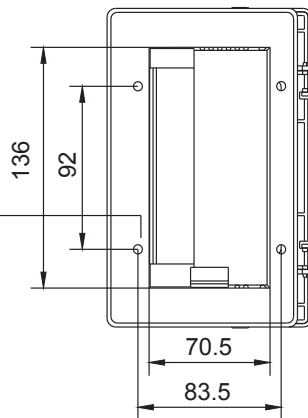


Note:

 The installation procedure show in
Fig.1-6 ~ Fig.1-8 is for MD-CCM03/E,
MD-CCM03/E(M), MD-CCM03/E(T),
MD-CCM03/E(H) and MD-CCM03/ET(H).




(Fig.1-6)

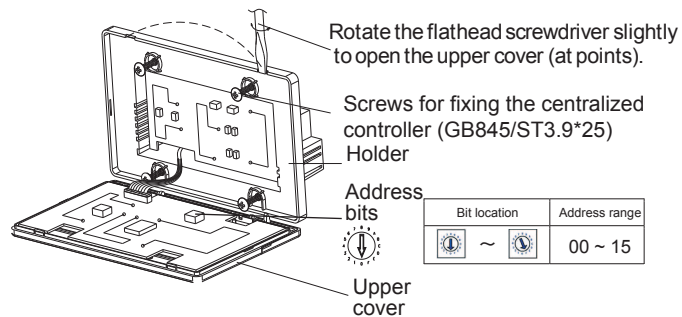

(Fig.1-7)

Bit location	Address range
~	00 ~ 15

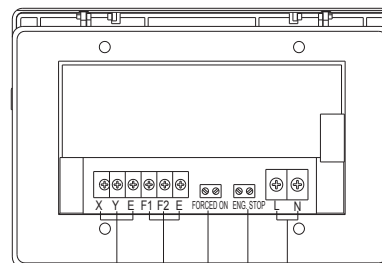

Power cable interface
of centralized controller
198V~242V (50 / 60HZ)


Emergent stop switch

Emergent start switch

Communication interface with computer


Communication interface with indoor interface

(Fig.1-8)

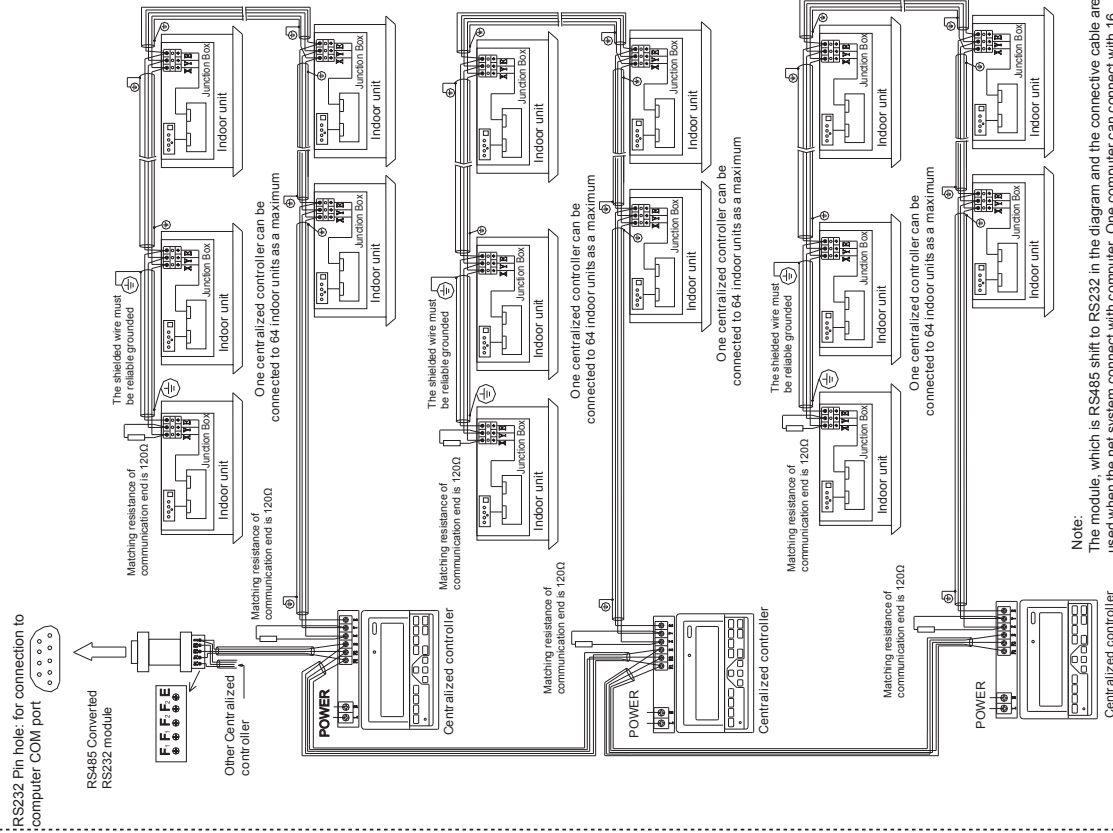


Note:
The module, which is RS485 shift to RS232 in the diagram and the connective cable are only used when the net system connect with computer. One computer can connect with 16 centralized controllers, namely 16X64=1024 indoor units could be controlled at most. The centralized controller to be distinguished by dial code address, the address setting range is from 0 to 15, thus in a network system without two centralized controller could be set in a same address.

(Fig.2)

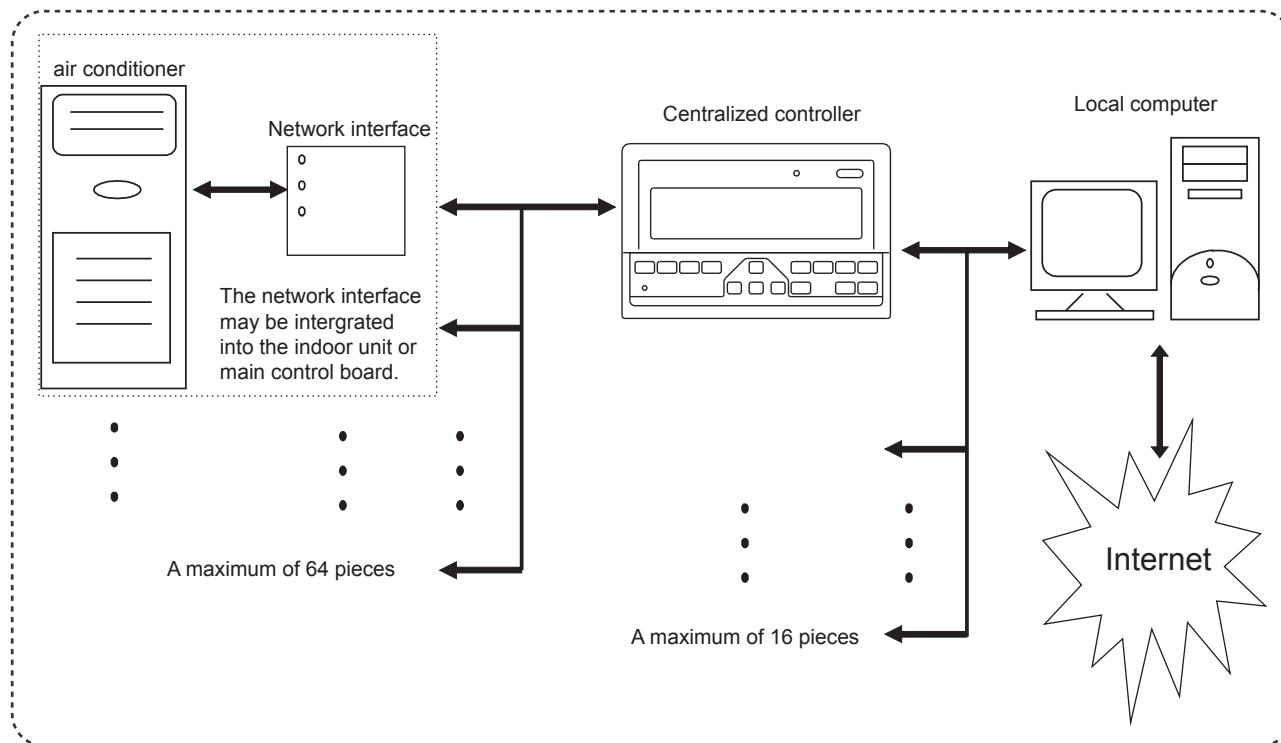


(Fig.3)

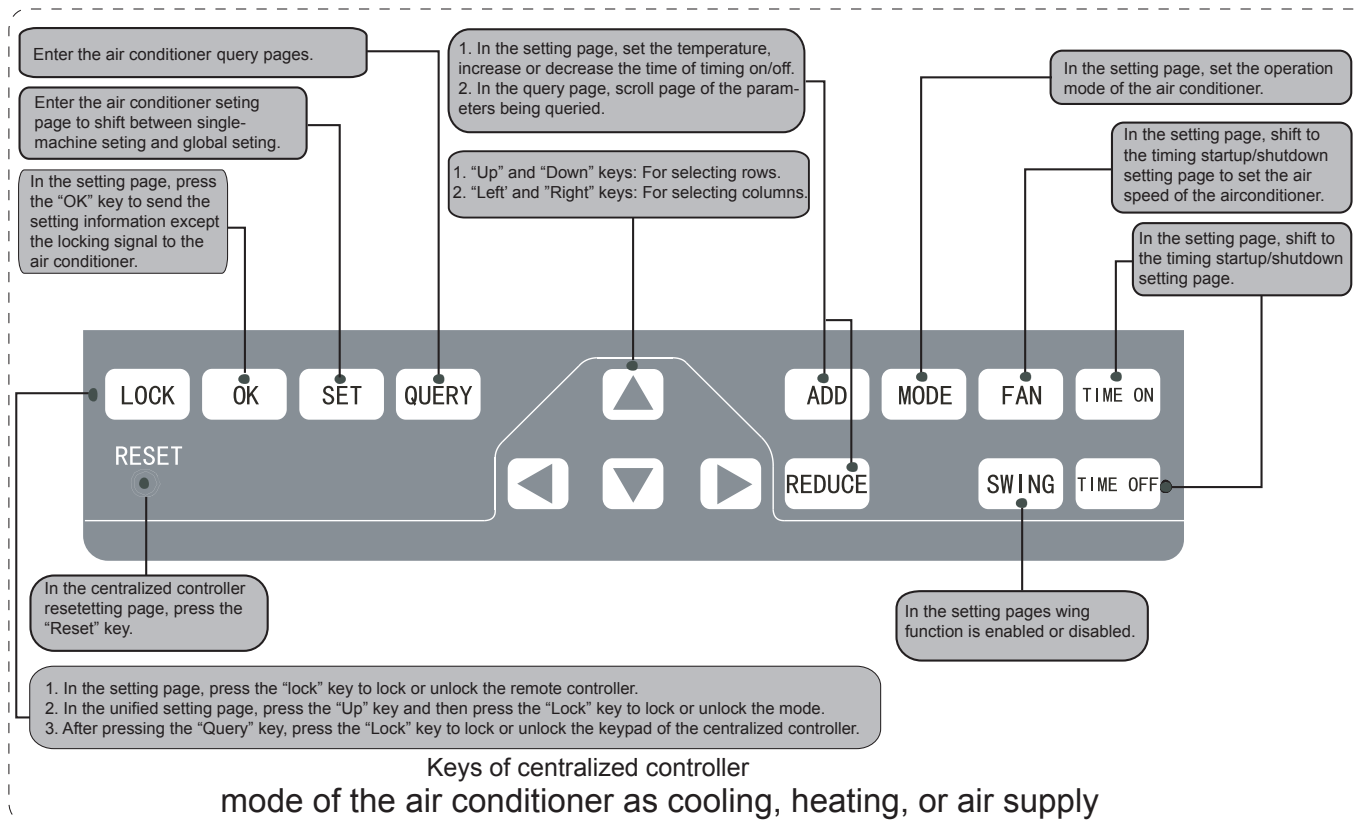

(Fig.4)



Full display of LCD

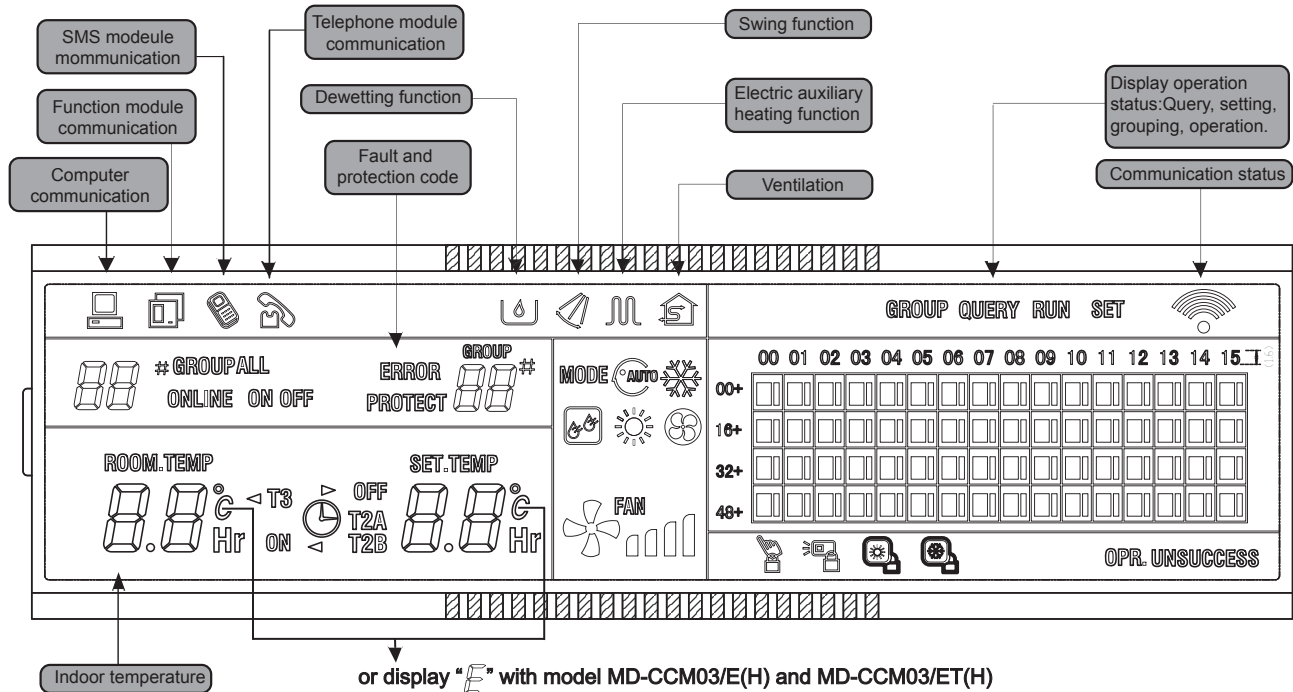

(Fig.5-1)


Full display of LCD

or display "E" with model MD-CCM03/E(H) and MD-CCM03/ET(H)

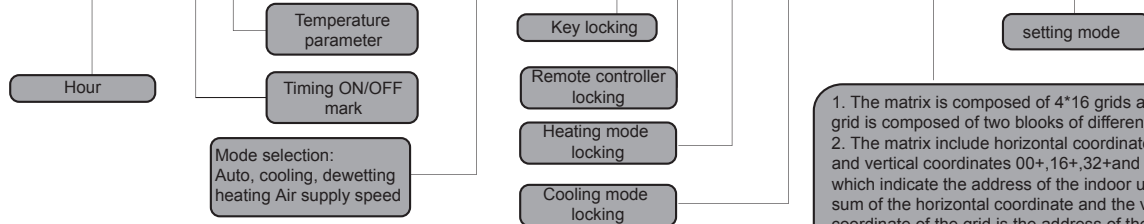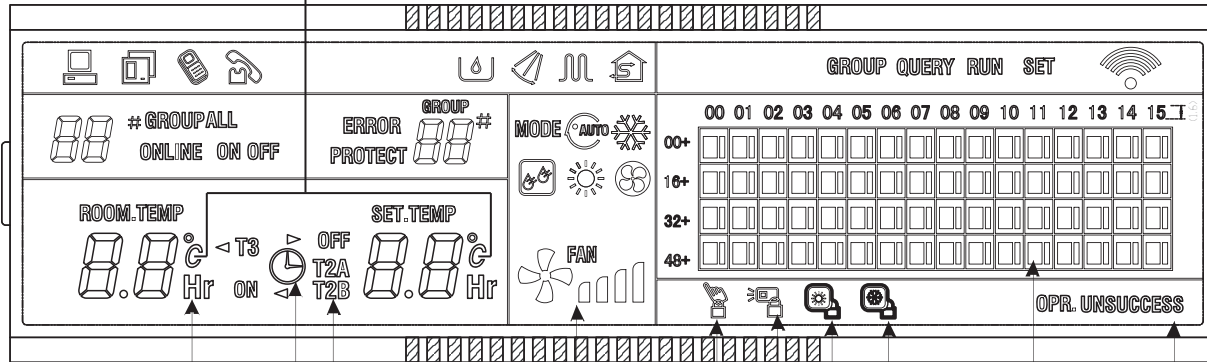


1. The matrix is composed of 4*16 grids and each grid is composed of two blocks of different sizes.
2. The matrix include horizontal coordinates 00-15 and vertical coordinates 00+,16+,32+and 48+, which indicate the address of the indoor unit. The sum of the horizontal coordinate and the vertical coordinate of the grid is the address of the grid. Each grid corresponds to an indoor unit of this address.


(Fig.5-2)

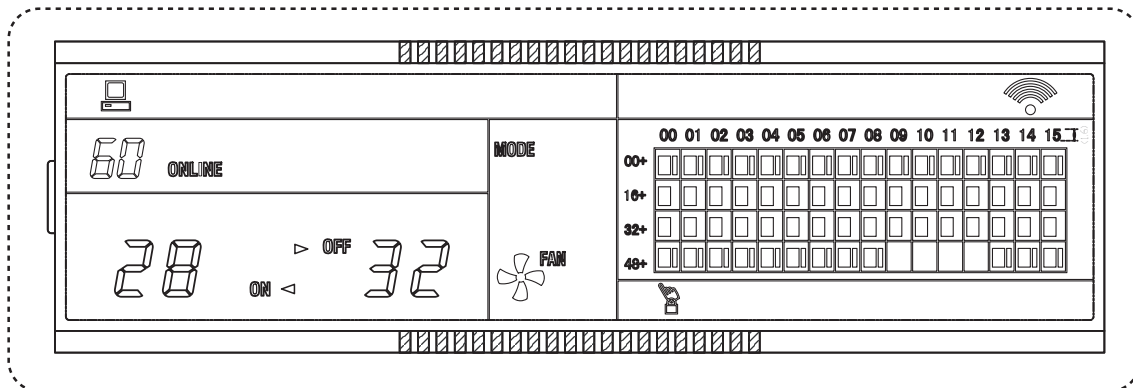


(Fig.6)

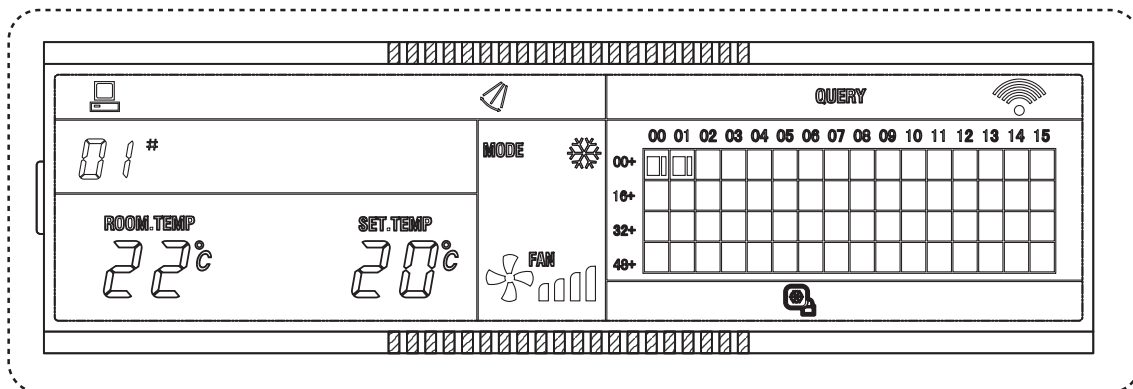

(Fig.7)

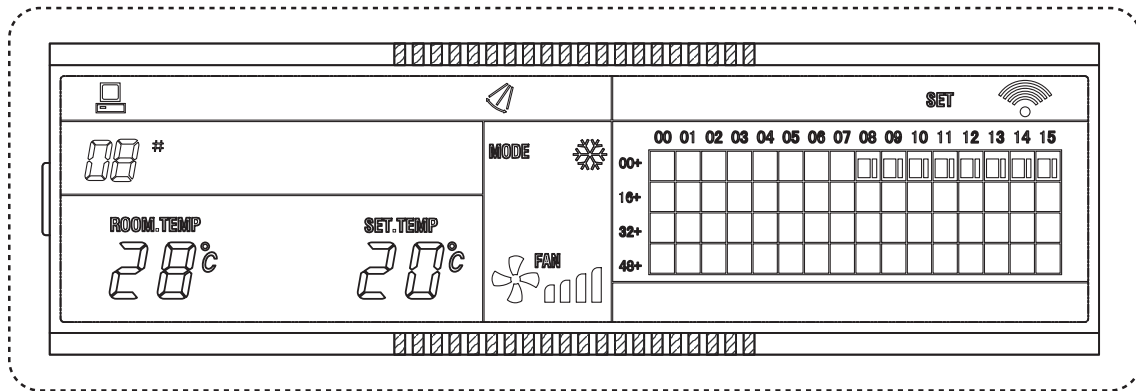

(Fig.8)

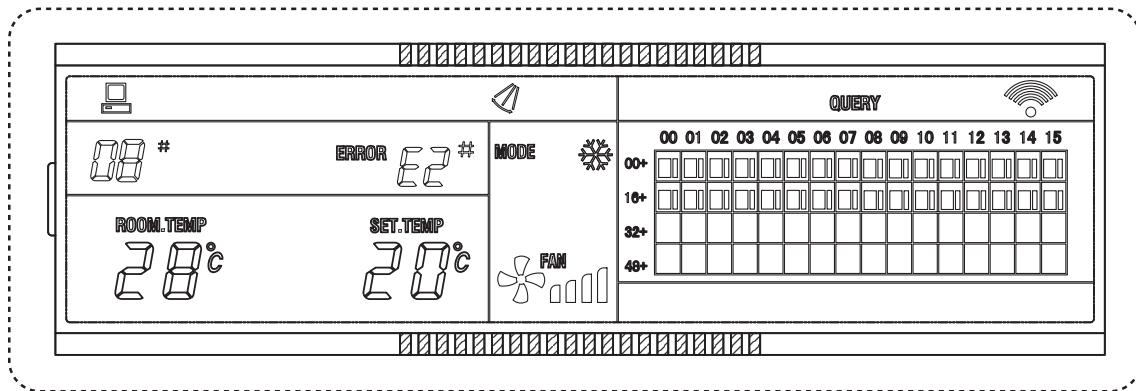

(Fig.9)

MDV06IU-011JW

202055100062

