



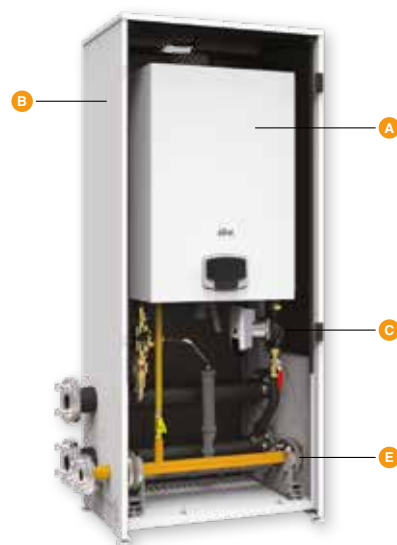

CASCADE INSTALLATION

For outdoors

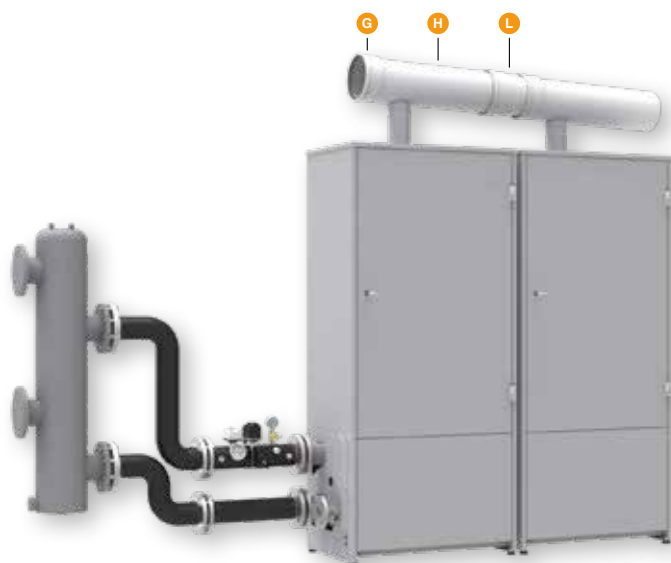

ACCESSORIES

NECESSARY TO CORRECTLY INSTALL FORCE W GENERATORS IN A BANK

P _{ref} (50/30°C)	A					B	C		E	G	H	L	
	60	80	99	120	150		7-m modulating circulator	10-m modulating circulator					
	MODULES FORCE W												
	Tot. modules												
	60	80	99	120	150	046058X0	042070X0	042071X0	042073X0	041091X0	041092X0	041093X0	041094X0
62	1					1	1	1	1	-	-	-	1
77		1				1	1	1	1	-	-	-	1
98			1			1	1	1	1	-	-	-	1
117				1		1	1	1	1	-	-	-	1
148					1	1	1	1	1	-	-	-	1
124	2					2	2	2	2	1	2	1	2
139	1	1				2	2	2	2	1	2	1	2
154		2				2	2	2	2	1	2	1	2
179	1			1		2	2	2	2	1	2	1	2
194		1		1		2	2	2	2	1	2	1	2
215			1	1		2	2	2	2	1	2	1	2
234				2		2	2	2	2	1	2	1	2
265				1	1	2	2	2	2	1	2	1	2
296					2	2	2	2	2	1	2	1	2
332			1	2		3	3	3	3	1	3	2	3
351				3		3	3	3	3	1	3	2	3
373		1			2	3	3	3	3	1	3	2	3
394			1		2	3	3	3	3	1	3	2	3
413				1	2	3	3	3	3	1	3	2	3
444					3	3	3	3	3	1	3	2	3
468				4		4	4	4	4	1	4	3	4
530				2	2	4	4	4	4	1	4	3	4
561				1	3	4	4	4	4	1	4	3	4
592					4	4	4	4	4	1	4	3	4

* Flue gas accessories certified for installation in a utility room or in a protected place

ACCESSORIES

UPON REQUEST FOR CONFIGURATION ACCORDING TO PROJECT SPECIFICATIONS

DESCRIPTION		CODE	
	additional sensor for storage tank and/or system flow for cascade configurations with and without hydraulic separator	1 cable 2 m	1KWMA11W
		1 cable 5 m	043005X0
	outdoor probe		013018X0
	Single empty cabinet for outdoors		046060X0
	Double empty cabinet for outdoors		046061X0
	hydraulic separator DN 32. For installation until 150 kW. The installer is responsible for the connection with the generator		042086X0
	hydraulic separator DN 65. For installation from 151 kW to 300 kW		042078X0
	installation kit for hydraulic separator. For installation from 151 kW to 300 kW		042079X0
	hydraulic separator DN 65. For installation from 301 kW to 600 kW		042080X0
	installation kit for hydraulic separator. For installation from 301 kW to 600 kW		042081X0